



Lenovo ThinkPad T500 Battery Replacement

This guide will show the user how to replace the battery of the Lenovo ThinkPad T500.

Written By: Nickie Gurney



INTRODUCTION

The Lenovo Thinkpad T500 supports 6-cell and 9-cell batteries.



PARTS:

- [ThinkPad Li-ion Battery \(9 Cell\)](#) (1)
-

Step 1 — Battery



- Slide the battery locking tab on the underside of the ThinkPad T500 to the right.

Step 2



- With the tab in the "unlock" position, gently slide the battery away from the body of the ThinkPad.

Step 3



- The battery is out! You can now replace it with the correct replacement battery and be on your way!

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 06:59:49 PM.